




Medium Fast Edge Paper

Same speed, smaller size! Medium Fast Edge® Paper is engineered with a 13% smaller surface area than its larger counterpart. But its cost-saving size doesn't mean fewer benefits – this bead comes complete with everything drywall finishers know and love about Trim-Tex's Fast Edge Paper line: the smooth laminated paper, the simple installation, the bond strength that can't be beat and, of course, the speediest finish in the game.

Installation Guide

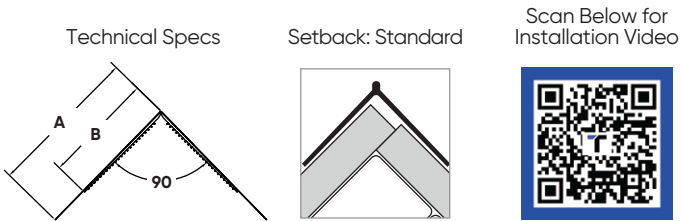

Before Installation:

Measure, cut and dry fit the bead.

Step 1:

Apply compound to Fast Edge Paper using a hopper.

Step 2:

Place bead on the corner.

Step 3:

Press the bead in place, applying pressure using the Pro Series Fast Edge Paper Quad Roller.


Step 4:

Wipe the surface of Fast Edge Paper to clean any excess mud.

Step 5:

Finish with drywall compound.

Step 1:

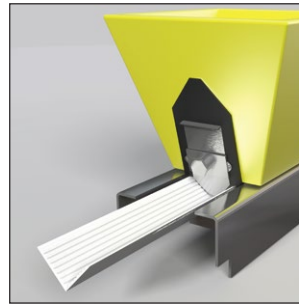

Step 2:



Step 3:



Step 4:



Step 5:

